LED Light






Link The universal indicator control unit for trailer conversion.


Product Description

- If the direction indicator is working (power draw is greater than 1 Watt) a resistor is switched
- In case of LED failure the power resistor is switched off therefore triggering the failure display output built into the flasher unit.

Outline dimension

Connection

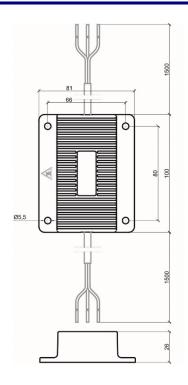

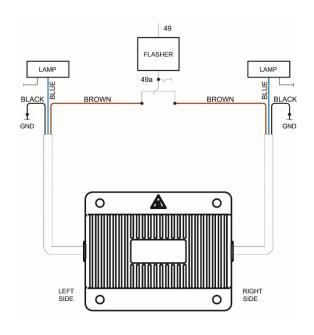

Installation/ General prescriptions

- The installation of this device should only be undertaken by qualified electrician.
- Before starting installation or maintanance work ensure that the circuit is isolated from the supply by disconnecting the vehicle battery and withdrawing the circuit fuse or circuit breaker.
- Please disconnect the trailer plug, if existent, from the socket of the towing vehicle.
- Be sure to observe the warnings mentioned earlier.

Installation/Fixing

- The device must be fixed on a flat metal surface which has a heat sink function.
- The device must shall be mounted on a surface which are not exposed to strong vibrations.
- The device should be mounted in horizontal direction for optimal air circulation.
- The device must be positioned in water protected areas.
- Mount the device on a suitable metal surface at least with 4 screws.
- Connectors and connections boxes must be watertight.
- After the installation the correct function of the complete lighting system must be checked.